

Uniden[®]

XDECT 6135BTU Series

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- **This unit is NOT waterproof.** DO NOT expose this unit to moisture.
- DO NOT expose this unit to rain.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!

Important Notice:

- Under power failure conditions this appliance may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

General Notices for New Zealand Model:

- The grant of a NZ Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- The maximum volume setting of this telephone exceeds the Telecom specified volume requirement. Telecom takes no responsibility for the high volume available on this telephone, who believe this telephone is too loud should contact the manufacturer at the website indicated on owner's manual warranty page.
- For telephone networks other than Telecom there may be a charge incurred for local calls if the Insert 0 feature is on. Turn Insert 0 off.
- This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

XDECT 6135BTU SERIES OWNER'S MANUAL

What's in the box?



XDECT 6135BTU base with answering system and cordless handset

Battery cover



Not pictured:

- Rechargeable battery (BT-694 or BT-694s)
- Belt clip
- AC adapter (AAD-6135)
- Telephone cord
- Wall Mount Bracket

You will also find:



Accessory handset and charger

Not pictured:

- Rechargeable battery (BT-694 or BT-694s)
- Battery cover
- Belt clip
- AC adapter (AAD-600S(M))

If you purchased model number:	You should have:
XDECT 6135BTU	None
XDECT 6135BTU+1	1 of each
XDECT 6135BTU+2	2 of each
XDECT 6135BTU+3	3 of each
XDECT 6135BTU+4	4 of each
XDECT 6135BTU+5	5 of each

- ◆ If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!
- ◆ Need help? Get answers at our website:
www.uniden.com.au for Australian model
www.uniden.co.nz for New Zealand model.

CONTENTS

Features of XDECT 6135 BTU series	3
Installing Your Phone	4
Setting Up the MobileLink Bluetooth™ Connection	5
Getting to Know Your Phone	7
Using the Handset Menu.....	10
Using Your Phone	12
Using Your Bluetooth Connection.....	13
Finding a Lost Handset.....	13
Changing the Volume.....	13
Staying in Range.....	14
Using the Caller ID and Redial Lists.....	14
Using Call Waiting.....	15
Using an Optional Headset.....	16
Using the Phonebooks.....	16
Downloading mobile phonebooks into your phone.....	16
Adding Phonebooks Entries (Home Only).....	18
Deleting All the Phonebook Entries.....	18
Chain Dialing.....	18
Using Special Features	19
DND.....	19
Call Block.....	19
Multihandset Features.....	20
Conference Calling (1 Line).....	20
Conference Calling (2 Line).....	21
Privacy Mode.....	21
Call Transfer.....	21
Intercom.....	22
Voice Message Notification.....	22
Using the Answering System	23
Answering System Options (<i>Ans. Setup</i>).....	23
Personalizing the Greeting.....	24
Accessing the Answering System.....	24
Using the System While You're Away from Home.....	26
Important Information	27
Solving Problems.....	27
Resetting Handsets.....	30
Registering Handsets.....	30
Adapter and Battery Information.....	31
Mounting the base unit on a wall.....	32
Index	34
One-year Limited Warranty	36

FEATURES OF THE XDECT 6135BTU SERIES

Great features of this cordless phone include:

- Designed and Engineered in Japan
- 1.8GHz Extended DECT Technology
- Bluetooth MobileLink
 - Connection for up to 4 Mobile phones
 - USB port to charge single Mobile phone
 - Phonebook download (up to 1500 entries per Mobile)
- Multi (10) Handset Capable¹
- Wall Mountable Base
- Extra Large Backlit LCD Display with Date & Time
- Digital Duplex Speakerphones on Handset and Base
- 200 Number Home Phonebook (shared)
- Call Waiting²/Flash
- Call ID² Features
 - 50 Caller ID² Memories (shared)
 - Caller Name Tag² and Personal Ring²
 - 20 Number Call Block²
 - Caller Announce (Text-to-speech for Caller ID information²)
- 9 Ringer options (4 Rings/5 Melodies)
- 4 Level Ringer Volume
- Ringer Do Not Disturb (DND) mode
- 6 Level Earpiece Volume
- 6 Level Speaker Volume
- Hearing Aid Compatible
- 10 Number Redial Memories
- Intercom/Announce Call Transfer
- 1-Line Conference Calling, up to 4 way (1 line (landline or mobile) + 2 handsets + base)
- 2-Line Conference Calling, up to 5 way (Landline Call + Mobile Call + 2 handsets + base)
- up to 7 Days Handset Standby Time³
- up to 10 Hours Handset Talk Time³
- Automatic ECO (power save) Mode
- Mute/Hold
- Headset Capable (for Handset)
- Beltclip
- Integrated Digital Answering Machine:
 - 16 minutes recording capacity
 - up to 59 messages
 - Remote access from Handset or away from home
- And More!

¹ Maximum expandable with XDECT 6105 accessory handsets.

² Caller ID, Call Waiting features work only if you subscribe to the service provided by your local telephone company. There is usually a fee for this service. Name Tag, Personal Ring and Call Block features require incoming Caller ID data.


³ Based on normal use with full battery charge.

Specifications subject to change. Visit the XDECT 6135BTU webpage on the Uniden website for the latest information.

INSTALLING YOUR PHONE

Charge the Battery

1. Unpack all handsets, battery packs, and battery covers.
If you need to remove a cover, press in on the notch and slide the cover down and off.
2. Line up the battery connector with the jack inside the handset; the connector only fits one way.
3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery is securely connected.
4. Replace the battery cover and slide it into place.
5. Use an AC adapter to connect the power jack on the base to a regular indoor (240V AC) power outlet. Connect any chargers the same way.
6. Place a handset in the base with the display facing forward. If the display doesn't light up, reseal the handset or connect the base to a different outlet. For 2 or more handsets, place each handset in a charger.

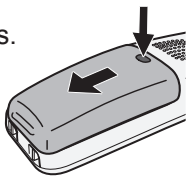

Charge all handsets completely (about 15 hours) before using.

Connect the Telephone Cord

Use the telephone cord to connect the **TEL LINE** jack on the base to a standard telephone wall jack.

Test the Connection

1. Pick up the handset and press **HOME/FLASH**. The handset sounds a dial tone, and the display shows *Talk*.
 - If you don't hear a dial tone or the display says *Check Tel Line*, check the connection between the base and the phone jack.
2. Make a quick test call. (Press **END** to hang up.)
 - If there's a lot of noise, check for interference (see page 27).
3. Test all handsets the same way. If you can't get a dial tone, move the handset closer to the base.

Attaching the Belt Clip

Line up the holes on each side of the handset. Insert the belt clip into the holes on each side of the handset. Press down until it clicks. To remove the belt clip, pull either side of the belt clip to release the tabs from the holes.

To Mount the Base Unit on a Wall, see page 32.

SETTING UP THE MOBILELINK BLUETOOTH™ CONNECTION

The XDECT 6135BTU with MobileLink technology can connect with mobile phones that support the Bluetooth V2.1 handsfree profile.

Visit our website on the front cover or contact customer service for a detailed list of tested mobile phones.

- ◆ If you are not certain of the profiles supported by your Bluetooth phone or if you have difficulty pairing your phone to the XDECT 6135BTU, see the manual that came with your phone.
- ◆ With the MobileLink feature, you can essentially treat your mobile phone as a second line. You can use the XDECT 6135BTU handset to make and receive calls on your mobile phone number, put mobile phone calls on hold, and transfer calls to other handsets. See page 13 for more information.
- ◆ Bluetooth wireless devices have a maximum range of about 3 m; the actual range will vary depending on local conditions (obstacles, battery power, interference, etc.).

Pair your Bluetooth phone

Pairing “introduces” four Bluetooth devices and gives them permission to connect to each other. In most cases, once you pair a phone to the XDECT 6135BTU, these devices connect automatically whenever they detect each other. (If you have to manually reconnect each time, check the Bluetooth settings on your mobile phone.) You can pair your Bluetooth devices through the XDECT 6135BTU handset.

1. Press **MENU/SELECT** to display the handset’s main menu.
2. Select the *Bluetooth Setup* menu, then select the *Add Mobile phone* submenu. The base goes into pairing mode when the handset displays *Search & select from Mobile XDECT 6135BTU PIN: 0000*.
3. On your Bluetooth phone, start a search for other Bluetooth devices. (This process may take several seconds and it will be different for each mobile phone. See your phone owner’s manual for detailed instructions.)
4. Your phone should discover a device called *XDECT 6135BTU* or *Handsfree device*. When your phone asks if you want to pair with this device, answer yes.
5. If your phone prompts you for a PIN code or password to pair with the XDECT 6135BTU, enter **0000** (four zeroes).

1. When your phone accepts the Bluetooth connection, the XDECT 6135BTU sounds a confirmation tone. The Bluetooth device number icon on the base and the handset display light up.
- ✎ **Most mobile phones automatically transfer the audio to a Bluetooth device as soon as it pairs; if yours does not, look in your mobile phone's Bluetooth setup for a "transfer audio" or "send audio to device" option.**

To test the connection


1. Pick up the handset from the cradle.
2. Dial the number you want to call, then press **MOBILE** on the handset. You may not hear a dial tone or ringing, but the handset display says *Talk*.
3. Make sure the call connects and you can hear clearly. (When you're finished, press **END** to hang up.)
 - ◆ The XDECT 6135BTU remembers the pairing information for your mobile phone; if it loses connection with your phone for any reason (e.g., the mobile phone travels out of range, runs out of charge, etc.), the XDECT 6135BTU can automatically reconnect the next time your phone becomes available.

Using the XDECT 6135BTU with four Bluetooth phones

- ◆ The XDECT 6135BTU can save the pairing information for four different Bluetooth phones, but it can only use one mobile line at any given time. For example, if you pair the XDECT 6135BTU to four Bluetooth phones, when you press **MOBILE** on the handset, the XDECT 6135BTU asks which phone you want to connect to.
- ◆ If you are using the XDECT 6135BTU to talk on one Bluetooth phone, the XDECT 6135BTU will not ring if a call comes in on another phone.
- ◆ You can set a different ring tone for each paired mobile phone (see page 10).
- ◆ To pair another Bluetooth phone, just repeat the pairing procedure with the new phone. (If the paired phones interfere when you're pairing the new one, just turn off Bluetooth on any paired phones until you finish pairing the new one.)


GETTING TO KNOW YOUR PHONE

Parts of the Base

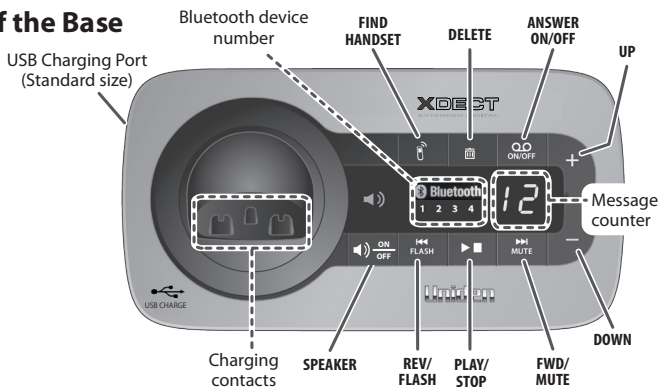



Key (icon)	What it does
SPEAKER ()	<ul style="list-style-type: none"> In standby: function is not available. When a call comes in, answer the call or join in a conference call.
FIND HANDSET ()	<ul style="list-style-type: none"> In standby: page all handsets.
REV ()	<ul style="list-style-type: none"> In the first 2 seconds of a message: go to the previous message. Anytime after that: restart the current message.
DELETE ()	<ul style="list-style-type: none"> When listening to messages: delete the current message. In standby: delete all messages. When a call comes in on a paired Bluetooth phone and while this phone is ringing: block this call.
ANSWER ON/OFF ()	<ul style="list-style-type: none"> In standby: turn the answering system on and off
PLAY/STOP ()	<ul style="list-style-type: none"> In standby: begin message playback. While screening calls: mute Call Screen. While playing a message: stop playing messages. While the phone is ringing: ignore this call (mute the ringer).
FWD ()	<ul style="list-style-type: none"> While playing a message: skip to the next message.
DOWN ()	<ul style="list-style-type: none"> In standby: decrease the ringer volume. While playing a message: decrease the speaker volume.
UP ()	<ul style="list-style-type: none"> In standby: increase the ringer volume. While playing a message: increase the speaker volume.
BLUETOOTH DEVICE NUMBER	<ul style="list-style-type: none"> The number indicates the Bluetooth device number linked to the XDECT 6135BTU.

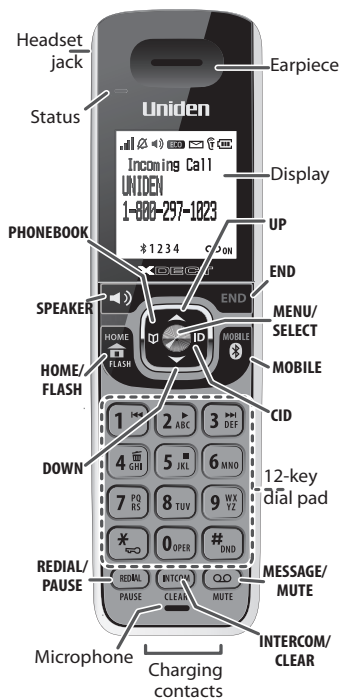Parts of the Handset












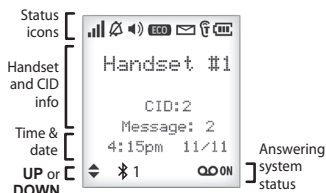

Key (icon)	What it does
UP (▲)	<ul style="list-style-type: none"> In standby: increase the ringer volume. During a call: increase the audio volume. In any menu or list: move the cursor up one line.
MENU/SELECT	<ul style="list-style-type: none"> In standby: open the menu. In any menu or list: select the highlighted item.
MOBILE (Bluetooth icon)	<ul style="list-style-type: none"> In standby: start a telephone call using a paired Bluetooth phone. While a paired phone is ringing: answer the incoming call. During a call with a paired phone: switch to a waiting call.
CID	<ul style="list-style-type: none"> In standby or during a call: open the Caller ID list. When entering text: move the cursor to the right.
END	<ul style="list-style-type: none"> During a call: hang up. In any menu or list: exit and go to standby. While the phone is ringing: ignore this call (mute the ringer).
#/DND	<ul style="list-style-type: none"> Do Not Disturb. In standby: press and hold to turn off the ringer on the base or any registered handset.
MESSAGE/MUTE (🔇)	<ul style="list-style-type: none"> In standby: access your answering system. During a call: mute the microphone. While the phone is ringing: ignore this call (mute the ringer).
INTERCOM/CLEAR	<ul style="list-style-type: none"> In standby: start an intercom call. During a call: put the call on hold and start a call transfer or conference. When entering text or numbers: erase the character at the cursor (press and hold to erase all characters).

Key (icon)	What it does
REDIAL/PAUSE	<ul style="list-style-type: none"> • In standby: open the redial list. • When entering a phone number: insert a 2-second pause.
* 	<ul style="list-style-type: none"> • Press and hold to lock/unlock the keypad.
DOWN (▼)	<ul style="list-style-type: none"> • In standby: decrease the ringer volume. • During a call: decrease the audio volume. • In any menu or list: move the cursor down one line.
SPEAKER (🔊)	<ul style="list-style-type: none"> • Switch a normal call to the speakerphone (and back).
HOME/FLASH 	<ul style="list-style-type: none"> • In standby: start a telephone call on your land line (get a dial tone). • While the land line is ringing: answer the incoming call. • During a call: switch to a waiting call.
PHONEBOOK (📖)	<ul style="list-style-type: none"> • In standby or during a call: open the phonebook. • In the menu: go back to the previous screen. • When entering text: move the cursor to the left.


Reading the Display

The table shows possible status icons and what they mean. Since the icons appear based on what the phone is doing, you won't see all the icons at the same time.



Icon	What it means
	The signal from the base is 1) weak through 4) strong.
	The ringer is turned off and will not ring for new calls.
	The speakerphone is on.
	The handset is using ECO (power save) mode.
	You have a voice message waiting.
	T-coil mode is on (see page 10).
	The battery is 1) full, 2) half charged, 3) getting low or 4) empty.
	Privacy Mode is on: no other handset can join the call.
	The operation using UP and DOWN is available.
 1 2 3 4	Bluetooth device number linked to the XDECT 6135BTU.
[Aa] [aA]	Enter 1) capital or 2) lower case letters (see page 12).

Using the Handset Menu

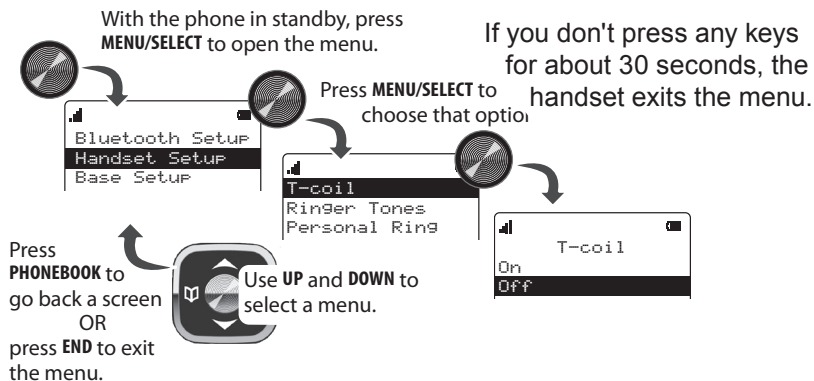

Bluetooth Menu

Use the Bluetooth menu to pair a mobile phone to the XDECT 6135BTU and select a mobile phone if you pair more than one.

Handset Setup Menu

You can change these settings separately for each handset.

Menu Option	What it does
<i>T-coil</i>	Turn on T-coil mode to reduce noise on hearing aids equipped with a telecoil (T-coil) feature. T-coil mode shortens talk time, so keep your battery fully charged.
<i>Ringer Tones</i>	Select a phone, then choose that phone's ring tone. As you highlight each ring tone, you hear a sample. Press MENU/SELECT to select.
<i>Personal Ring</i>	Turn on the personal ring feature. If you have Caller ID, this feature lets you assign special ring tones to anyone in your phonebook: this handset will use the special ring tone when that person calls.
<i>AutoTalk</i>	Have this handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have this handset answer a call when you press any key on the 12-key dialpad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

Menu Option	What it does
<i>LCD Contrast</i>	Change the contrast of the display.
<i>Caller Announce</i>	Turn Text-To-Speech on or off to hear CID information.
<i>HD Audio</i>	Turn HD Audio on or off.

Base Setup **Menu**

These settings affect the base.

Menu Option	What it does
<i>Caller Announce</i>	Turn Text-To-Speech on or off to hear CID information.
<i>HD Audio</i>	Turn HD Audio on or off.

Ans. Setup **Menu**

Refer to page 23 for details on setting up your answering system.

Date & Time **Menu**

Use this menu to set the clock (if you have Caller ID, the phone sets date and time automatically). Enter the date and time; select *AM* or *PM*. Use **CID** to move the cursor past a digit without changing it.

Global Setup **Menu**

The settings on this menu affect all handsets. Only one handset at a time can change these menu options.

Menu Option	What it does
<i>Set Line Mode</i>	Do not change this setting unless instructed to by customer service.
<i>VMWI Reset</i>	Reset the Voice Message Waiting Indicator (see page 22).
<i>Edit Voice Mail</i>	Enter, edit, or delete the access number for your voice mail service (see page 22).
<i>Edit Int'l No.</i>	Enter, edit, or delete international numbers. The "+" in a phonebook entry will be actually dialed with this number.
<i>Insert 0</i>	This feature adds "0" or "00" at the beginning of the number received from Caller ID. The default setting for New Zealand is <i>On</i> . The default setting for Australia is <i>Off</i> .
<i>Time Adjustment</i>	Select <i>Auto</i> from CID if you want the CID function to supply the time. Select <i>Manual</i> for the system clock to do it.

Call Blocking **Menu**

See page 19 for a detailed description of the Call Blocking feature.

Entering Text on Your Phone

- ◆ Use the 12-key dial pad anytime you want to enter text into your phone (a name in the phonebook, the handset banner, etc.).
- ◆ If two letters in a row use the same key, enter the first letter; wait for the cursor to move to the next space and enter the second letter.

To...	Press...
move the cursor left	PHONEBOOK.
move the cursor right	CID.
erase the character at the cursor	INTERCOM/CLEAR.
erase the entire entry	and hold INTERCOM/CLEAR.
enter a blank space	#.
switch between upper and lower case letters	*.
rotate through the punctuation and symbols	0.

USING YOUR PHONE

This section explains the most common functions on the phone.

To...	From the land line	From the mobile phone
make a call, dial the number, then	Press HOME/FLASH or SPEAKER.	Press MOBILE. If two or more mobile phone is paired, the phone prompts you to choose one.
answer a call	Press HOME/FLASH or SPEAKER.	Press MOBILE.
hang up	Press END or put the handset in the cradle.	
ignore a call (mute the ringer)	While the phone is ringing, press MESSAGES/MUTE on the handset.	
switch between the speakerphone and earpiece	Press SPEAKER.	
switch from one line to the other (automatic hold)	Press MOBILE. If two or more mobile phone is paired, the phone prompts you to choose one.	Press HOME/FLASH.
mute the microphone during a call	Press MESSAGES/MUTE. Press again to turn the microphone back on.	
put a call on hold	Press INTERCOM/CLEAR. After 5 minutes on hold, the call will be disconnected.	
return to a call on hold	Press HOME/FLASH or SPEAKER.	Press MOBILE.

Using Your Bluetooth Connection

After you have paired your mobile phone with the XDECT 6135BTU (see page 5), you can make and receive calls from your mobile phone through the XDECT 6135BTU.

To use the *Bluetooth* menu options, press **MOBILE** with the phone in standby, then select a mobile phone. Select one of these options:

To...	Select...
make a mobile phone call	<i>Make Call</i> ; enter the number to call.
let the specific handsets ring for incoming calls on that mobile phone	<i>Privacy Setup</i> , then select <i>On</i> or <i>Off</i> . <ul style="list-style-type: none">• All handsets set to <i>Off</i>: All handsets will ring (default).• One or more handsets set to <i>On</i>: Only handsets set to <i>On</i> will ring. 📞 Other handsets do not ring but they can still receive calls and get CID information.
download phonebook	<i>Download PB</i> . The phone displays a confirmation screen when complete.
delete Bluetooth pairing	<i>Remove Mobile</i> . The phone displays a confirmation screen when complete.
relink a mobile phone	<i>Connect</i> . The phone displays a confirmation screen when complete.

📞 **You can also access the *Bluetooth* menu options from the main menu (see page 10).**

Finding a Lost Handset

With the phone in standby, press **FIND HANDSET** on the base. All handsets beep for 1 minute; to cancel, press **FIND HANDSET** again or press any handset key.

Changing the Volume

To change the...	When...	Press...
earpiece volume for each handset	you are listening to that earpiece or speaker (playing messages, etc.)	UP to increase the volume.
speaker volume		
ringer volume (If you turn the ringer all the way down, that particular ringer turns off.)	the phone is in standby	DOWN to decrease it.

Staying in Range

Your system will alert you when you are out of range (or about to go out of range).

If...	Then...
the handset and base are connected (intercom call) and no signal from the base	the handset sounds an error tone and <i>Out of Range</i> displays.
the handset is in Talk mode and moves out of range	the outside line is put on Hold for 30 seconds and then dropped. The LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
the handset and base are in standby mode and the handset does not get a signal from the base for 5 seconds	the LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
audio deteriorates	the handset sounds an error tone. The LCD alternately displays <i>End of Range</i> and <i>Move toward base</i> .
you are trying to go off-hook	call data displays and then an error tone sounds. The LCD alternately displays <i>Out of Range</i> and <i>Check Base Power</i> .
you are trying to go on-hook	Talk mode continues for 5 seconds and then <i>END</i> displays.

Using the Caller ID and Redial Lists

Caller ID (CID) is a service available from your telephone provider that shows the phone number (and sometimes the caller's name) of incoming calls. Contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none">• The phone saves the information for the last 50 incoming calls (both land line and mobile phone calls) to the <i>CID list</i>. An asterisk (*) marks any calls received since the last time you checked the record details.• All handsets share the same CID list so only one handset can access the list at a time.• In standby, handsets show how many calls came in since the last time you checked the CID list.	<ul style="list-style-type: none">• Each handset remembers the last 10 numbers you dialed on it.• Only one handset can access its redial list at a time.• The handset does not record which line was used to call the number.

To...	Press...
open the CID list	CID , then use the UP and DOWN keys to enter the list. Up to 5 entries display at a time.
open the redial list	REDIAL/PAUSE .
scroll through the lists	UP to select the previous number. DOWN to select the next number. In CID list: • RIGHT to show details • LEFT to return to the previous screen.
select the CID number	SELECT to view the CID data of the highlighted number.
dial this number from the land line	(First, make sure the number is SELECTED , see above). HOME/FLASH or SPEAKER .
dial this number from the mobile phone	MOBILE . If you have two or more mobile phones paired, select the phone you want and press MENU/SELECT .
review current CID record details	MENU/SELECT after scrolling to the desired entry.
close the lists	END .

For individual record options, find a number (and review the detail for a CID record), and then press **MENU/SELECT** to display the following options:

Menu Option	What it does
<i>Delete</i>	Erase the number from the list.
<i>Store Into PH BK</i>	Add the number to the phonebook. The phone displays the <i>Edit Name</i> screen (see page 17).
<i>Add Call Block</i>	(CID list only) Add the number to the Call Block list (see page 19).

Using Call Waiting

Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.

If you get a Call Waiting call, the phone sounds a tone and displays any CID information received from the waiting call.

- ◆ For Australian Model: Press **HOME/FLASH** and then press **2** on the handset on a land line call, or press **MOBILE** on a mobile phone call to accept the waiting call. The first caller is put on hold, and you


will hear the new caller after a short pause. To return to the original caller, press **HOME/FLASH** and then press **2** on a land line call, or press **MOBILE** on a mobile phone call again. On the base, press **FLASH** twice to accept a waiting call. To return to the original caller, press **FLASH** twice.

- ◆ For New Zealand Model: Press **HOME/FLASH** on the land line or **MOBILE** on a mobile phone call to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **HOME/FLASH** or **MOBILE** again.

Using an Optional Headset

You can use a standard 2.5 mm telephone headset with your cordless handsets. To purchase headsets, visit our website (see the front cover).

- ◆ To install a headset, remove the headset jack cover and insert the headset plug into the jack.
- ◆ Just make and receive calls as usual, and use your headset to talk to the caller after the call connects.
- ◆ While you connect a headset, the handset automatically mutes the earpiece.

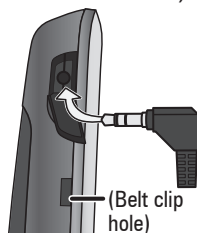

Using the Phonebooks

- ◆ You can download the phonebook (up to 1500 entries) from each paired mobile phone (up to four). You can also store up to 200 entries in the XDECT 6135BTU's home phonebook, which is separate from any downloaded phonebooks.
- ◆ Only one cordless handset can access the phonebook at a time.

Downloading mobile phonebooks into your phone

1. Make sure your mobile phone is paired to the XDECT 6135BTU and is within range of the base.
 2. With the XDECT 6135BTU in standby, open the menu and select *Bluetooth*.
 3. Select the mobile phone you want to download from, then select *Download PB*. When downloading is complete, the cordless handset displays a confirmation screen. To cancel downloading, press **END**.
- ◆ Each time you download a phonebook, the XDECT 6135BTU overwrites any previous copy of that phonebook. The XDECT 6135BTU automatically cancels the download if it receives an incoming call or someone tries to make an outgoing call.
 - ◆ If the download is interrupted or canceled, the XDECT 6135BTU reverts to the original copy of the downloaded phonebook.

If you delete the pairing information for a mobile phone, the downloaded phonebook from that phone will also be deleted.

To...	Press...
open the phonebook	PHONEBOOK , then select the phone name and then <i>View Number</i> .
scroll through the entries	DOWN to scroll through the entries from A to Z. UP to scroll from Z to A. RIGHT to show details LEFT to return to the previous screen.
jump to entries that start with a certain letter	the number key corresponding to the letter you want.
dial this number from the land line	HOME/FLASH or SPEAKER .
dial this number from the mobile phone	MOBILE . If you have two or more mobile phones paired, select the phone you want and press MENU/SELECT .
review the current entry's details	MENU/SELECT after scrolling to the desired entry.
close the phonebook	END .

For individual entry options, find a number and press **MENU/SELECT** twice to display the following options:

To...	Press...
save this mobile phonebook entry to the home phonebook	MENU/SELECT twice to open the menu, then select <i>Store Into PH BK</i> .
edit the current entry	MENU/SELECT twice to open the menu, then select <i>Edit</i> .
delete the current entry	MENU/SELECT twice to open the menu, then select <i>Delete</i> . To confirm, select <i>Yes</i> .

Adding Phonebook Entries (Home only)

With the phone in standby, open the phonebook. Select *Home* and then *Create New*. Enter a name and number and select a personal ring.

- ◆ Enter the phone number (up to 32 digits) exactly as you would dial it.
- ◆ If you need the phone to wait before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. You can insert multiple pauses, but each one counts as a digit (you'll see *P* in the display).
- ◆ To edit the name, press **PHONEBOOK** to move the cursor back and insert a letter. Press **INTERCOM/CLEAR** to delete a letter.
- ◆ To edit the number, press **INTERCOM/CLEAR** to back up the cursor and delete numbers. Re-enter the correct numbers.

Deleting All the Phonebook Entries

With the phone in standby, open the phonebook. Select the phone name and then *Delete All*. To confirm, select *Yes*.

Chain Dialing

If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Make your call normally.
2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number.
3. Press **MENU/SELECT** twice to send the code. If you change your mind, just close the phonebook.

USING SPECIAL FEATURES

DND (Do Not Disturb)

You can silence the ringers on the base and all handsets for a specific period of time; the answering system answers any incoming calls without playing anything through the speaker.

1. With the phone in standby, press and hold # **DND** on any handset. The phone prompts you to select the number of hours (1 - 9 or *Always On*) that you want it to stay in DND mode.
 2. To confirm, press **MENU/SELECT** or just wait about 5 seconds. The phone turns on the answering system and displays *Do Not Disturb* on each handset.
 3. After the selected number of hours, the phone automatically exits DND mode. To exit DND mode manually, press and hold # again.
- 🔇 **If the phone is in DND mode and you turn off the answering system, the phone exits DND mode.**

Call Block

If you subscribe to Caller ID, you can save phone numbers to the call block list. When a call comes in, the phone compares the received phone number to the numbers on the call block list. If the phone number is on the list, the phone replaces the caller's name with *Call Blocked* and blocks the call.

- 🔇 **You can block an incoming call from the mobile phone; press DELETE on the base.**

The call block list holds 20 entries, and all handsets share the same list. You can add entries by selecting *Add Call Block* in the CID menu that displays after you have viewed the CID record or through the *Call Blocking* menu (see below). (Only one handset can edit the call block list at a time.)

Call Blocking Menu Options

With the phone in standby, open the menu and select *Call Blocking*. Choose one of these options:

Menu Option	What it does
<i>View Number</i>	See the numbers on your call block list.

Menu Option	What it does
<i>Create New</i>	Add an entry to your call block list. The phone will prompt you to enter a name and phone number.
<i>Private Number</i>	Block all calls from numbers reported by CID as "Private." (This does not count as one of the 20 entries.)
<i>Unknown Number</i>	Block all calls from numbers reported by CID as "Unknown." (This does not count as one of the 20 entries.)

Call Blocking Entry Options

With the phone in standby, open the call block list and find the entry you want. Press **MENU/SELECT** to open the individual entry menu. Choose one of these options:

Menu Option	What it does
<i>Edit</i>	Edit this entry. The phone will prompt you to edit the name and phone number.
<i>Delete</i>	Erase this entry from the list and allow calls from this number.

Multihandset Features

 **To use the features in this section, you need at least 2 handsets.**

- ◆ Your base supports a total of 10 cordless handsets: the one that came with the base and up to 9 accessory handsets.
- ◆ You must register accessory handsets to the base before using them. (Handsets that came packaged with the base are already registered.)
- ◆ Handsets that aren't registered display a *Not Registered* message. For registration instructions, see page 30 or see the accessory handset manual.
- ◆ If a handset was ever registered to a base, you must reset it before it can register to a new base; see page 30, or see the accessory handset manual.

Conference Calling (1 Line)


- ◆ When an outside call comes in on the land line or the via a mobile, two handsets and the base can join in a conference call with the outside caller.
- ◆ To join a call that's already in progress, just press **SPEAKER** on the base or **HOME / FLASH** (to join a Landline call) or **MOBILE** (to join a Mobile call).
- ◆ To leave the conference call, hang up normally; the other handset remains connected to the call.

Conference Calling (2 Line)

A landline call and a mobile call can be connected in conference using the Line Conference feature.

- ◆ When an outside call comes in on the land line and then another outside call via a mobile, two handsets and the base can join in a conference call with the outside callers (5-way conference).
- ◆ To conference a the second outside call, press **INTERCOM / CLEAR** and then select *Line Conference*
- ◆ To join a call that's already in progress, just press **HOME / FLASH** or Speaker.
- ◆ To leave the conference call, hang up normally; the other handset remains connected to the call.

Privacy Mode

To activate privacy mode on a land line call in progress, press **MENU/ SELECT** twice. As long as privacy mode is on, you'll see a  in the display, and no other handsets can join your call. Privacy mode turns off automatically when you hang up; you can also turn it off by pressing **MENU/SELECT** twice.

To use privacy mode during a conference call, wait until all handsets have joined the call before turning on privacy mode. If a handset disconnects, that handset cannot rejoin the call as long as privacy mode remains on.

Call Transfer

To...	On the land line	Using mobile phone
transfer a call	Press INTERCOM/CLEAR , then select the handset you want to transfer the call to (select <i>ALL</i> to page all the handsets). When the other handset accepts the call, you'll be disconnected.	
cancel a transfer and leave the call on hold	Press END .	
return to the call	Press HOME/FLASH .	Press MOBILE .
answer a call transfer page	1. Press INTERCOM/CLEAR . You can speak to the transferring handset. 2. To speak to the outside caller, Press HOME/FLASH .	
		Press MOBILE .

Intercom

- ◆ Whenever the phone is in standby, you can make an intercom call between handsets without using the phone line.
- ◆ You can make an intercom call from any handset, but only two handsets can be in an intercom call at any time.
- ◆ If an outside call comes in during an intercom page, the phone cancels the page so you can answer the incoming call.
- ◆ If an outside call comes in during an intercom call, press **HOME/FLASH** or **MOBILE**, depending on which line is ringing, to hang up the intercom call and answer the outside call.

To...	Press...
make an intercom page	INTERCOM/CLEAR . Select the handset you want to talk with, or <i>ALL</i> to page all handsets at the same time.
cancel a page	END .
answer a page	INTERCOM/CLEAR or HOME/FLASH .
end an intercom call	END . Both handsets return to standby.

Voice Message Notification

If you subscribe to a voice mail service, your phone can notify you when you have a new message. This feature supports Frequency-Shift Keying (FSK) notification. Contact your voice mail provider for information.

When you have new messages, the display shows a message icon. To access your voice mail, press **MESSAGE/MUTE** and select *Voice Mail*.

📞 **When you select *Voice Mail*, you will be prompted to enter a Voice Mail Access number if you have not yet set one up (see page 11). If you have already set one up, your phone will dial it.**

After you listen to your messages, the message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

USING THE ANSWERING SYSTEM

 **The answering system works with land line calls only.**

Answering System Options (*Ans. Setup*)

You can set or change the answering system options from any handset. Just open the menu and select *Ans. Setup*.

Menu Option	What it does
<i>Security Code</i>	Enter a 2-digit PIN so you can access your answering system from any touch-tone phone (see page 26).
<i>Ring Time</i>	Set the number of rings (6, 9, or 12) before the system answers. <i>Toll Saver</i> makes the system answer after 2 rings if you have new messages or after 4 rings if you don't.
<i>Record Time</i>	Set the amount of time (1 or 4 minutes) callers have to leave a message. Choose <i>Announce Only</i> if you don't want the system to let callers to leave a message.
<i>Message Alert</i>	Have the system beep every 15 seconds when you have a new message. The alert stops after you listen to all your new messages or if you press any key on the base.
<i>Call Screen</i>	Turn on the call screen feature (see page 25).
<i>Ans. On/Off</i>	Turn your answering system on or off. You can also press ANSWER ON/OFF on the base.
<i>Record Greeting</i>	Record your greeting (see page 24).
<i>Greeting Options</i>	Switch greetings or delete your greeting (see page 24).

Personalizing the Greeting

Your personal outgoing message or *greeting* can be from 2 to 30 seconds long. If you don't record a greeting, the system uses a pre-recorded greeting: *Hello, no one is available to take your call. Please leave a message after the tone.*

To...	Follow these steps:
record a personal greeting	<ol style="list-style-type: none">1. Open the menu with the phone in standby. Select <i>Ans. Setup</i>, then <i>Record Greeting</i>.2. Press MENU/SELECT to start recording. Wait until the system says "Record greeting" before speaking.3. Press MENU/SELECT to stop recording. The system plays back your new greeting.4. To keep the greeting, press END. To delete it and try again, press INTERCOM/CLEAR.
switch between greetings	<ol style="list-style-type: none">1. Open the menu with the phone in standby. Select <i>Ans. Setup</i>, then <i>Greeting Options</i>.2. The system plays back the current greeting. Press MENU/SELECT to switch greetings.
delete your greeting	Switch to your personal greeting, then press INTERCOM/CLEAR while the greeting is playing.

Accessing the Answering System

When the phone's in standby, you can access the system from any handset:

- ◆ Only 1 handset can access the system at a time.
- ◆ If you do nothing for 30 seconds, the phone returns to standby.
- ◆ During remote access, the phone beeps so you know it's waiting for the next command.

During message playback, press **MENU/SELECT** to open the menu for playback control.

Play All Messages

Play All Messages replays all the messages received, starting with the newest, unheard messages and then replaying the older messages. With the phone in standby, press **MESSAGES/MUTE** to access the *Play Messages* selection. You can play messages with this mode from the base or from the handset.



To...	From the base	From a handset
play new messages	Press PLAY/STOP . The system announces the number of new and old messages, then plays each new message (followed by the day and time) in the order it was received. After the new messages play, the system plays the old messages.	Press MESSAGE/MUTE and select <i>Play Messages</i> .
restart this message	Wait at least 5 seconds after the message starts playing, press REV .	press 1 (number key).
replay an earlier message	Within 2 seconds after a message starts playing, press REV .	select 1 (number key).
skip a message	Press FWD .	Select 3 (number key).
delete a message	While a message is playing, press DELETE .	select 4 (number key).
delete all messages	With the phone in standby, press DELETE ; press DELETE again to confirm.	Not available.
play old messages	After the system plays all new messages, press PLAY/STOP again.	select 2 (number key).
stop playback	Press PLAY/STOP .	Select 5 (number key).

Screening Your Calls

You can use the answering system for call screening. While the system takes a message, you can listen on the base speaker (if you turn on *Call Screen*) or from a handset. Only one handset can screen calls at a time. If another handset tries to screen calls, it beeps and returns to standby.

To...	From the base	From a handset
hear the caller leaving a message	Listen to the caller over the speaker.	Press MESSAGE/MUTE .
answer the call	NA	Press HOME/FLASH .
mute the call screen without answering	Press PLAY/STOP .	Press END or return the handset to the cradle.
	If you mute the call screen, the system continues taking the message: it just stops playing through the speaker.	

Using the System While You're Away from Home

You can dial in to your answering system from any touch-tone phone. Before you can use this feature, you must program a security code.

Programming a Security Code

With the phone in standby, open the menu; select *Ans. Setup*, then select *Security Code*. Use the number keypad to enter a two-digit security code (00 to 99). Press **MENU/SELECT** when you're finished.

🔊 **Remember to make a note of your new security code!**

Dialing In to Your System

1. Call your phone number and wait until the system answers. (If the system is turned off, it answers after 15 rings and sounds a series of beeps.)
2. During the greeting or beeps, press # and **immediately** enter your security code. If you enter it incorrectly 3 times, the system hangs up and returns to standby.
3. The system announces the time, the number of messages in memory, and a help prompt. It beeps to let you know it's waiting for a command.
4. When you hear beeping, enter a 2-digit command from the chart.

#1	Repeat message	#5	Stop playback
#2	Play message	#6	Turn the system on
#3	Skip message	#9	Turn the system off
#4	Delete message	#0	Hear help prompts

🔊 **If you don't press any keys for 15 seconds, the system hangs up and return to standby.**

IMPORTANT INFORMATION

Solving Problems

If you have any trouble with your phone, check this section first. If you need help, visit the customer support page of our website listed on the front cover.

General problems	Possible solutions
No handsets can make or receive calls.	<ul style="list-style-type: none">• Check the telephone cord connection.• Disconnect the base AC adapter for a few minutes; then reconnect it.
A handset can't make or receive calls.	<ul style="list-style-type: none">• Move the handset closer to the base.
A handset can make calls, but it won't ring.	<ul style="list-style-type: none">• Make sure the ringer is turned on.• Make sure DND mode is turned off.
A handset is not working.	<ul style="list-style-type: none">• Charge the battery for 15-20 hours.• Check the battery connection.
The phone keeps ringing when I answer on an extension.	<ul style="list-style-type: none">• You may have to change the line mode. Contact Customer Service for instructions.
Audio issues	Possible solutions
Callers sound weak or soft.	<ul style="list-style-type: none">• Move the handset closer to the base.• Keep the handset's battery fully charged.• Increase the earpiece volume.
There's a lot of noise or static on the line	<ul style="list-style-type: none">• Check for interference from appliances (microwave ovens, TVs, etc.) or wireless devices (baby monitors, WiFi equipment, etc.). Move the handset or base away from the interference source.• If you use a telecoil hearing aid, turn on T-coil mode (see page 10).• If you have any service that uses the phone line, add a DSL or telephone line filter (see page 29).
Caller ID problems	Possible solutions
No handsets display Caller ID information.	<ul style="list-style-type: none">• Let calls ring twice before answering.• Make sure your Caller ID service is active.

Caller ID problems	Possible solutions
Caller ID displays briefly and then clears.	<ul style="list-style-type: none"> • You may have to change the line mode. Contact Customer Service for instructions.
Multi-handset problems	Possible solutions
I can't transfer calls.	<ul style="list-style-type: none"> • Reset the handset (see page 30).
Two handsets can't talk to a caller.	<ul style="list-style-type: none"> • See if any handset is in Privacy Mode.
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none"> • Move the handset closer to the base. • See if any handset is in Privacy Mode.
I can't register a new handset.	<ul style="list-style-type: none"> • Reset the handset (see page 30). • See if you have 12 registered handsets.
Answering system problems	Possible solutions
The answering system does not work.	<ul style="list-style-type: none"> • Make sure the answering system is on. • Make sure the base is plugged in.
The system won't record messages.	<ul style="list-style-type: none"> • See if <i>Record Time</i> is set to <i>Announce Only</i>. • Delete messages (memory may be full). • The answering system works with land line calls only.
A handset can't access the answering system.	<ul style="list-style-type: none"> • See if another handset is using the system. • Make sure the phone is in standby.
My outgoing message is gone.	<ul style="list-style-type: none"> • If there was a power failure, re-record your personal outgoing message.
I can't hear the base speaker.	<ul style="list-style-type: none"> • Make sure call screening is turned on. • Change the base speaker volume.
Messages are incomplete.	<ul style="list-style-type: none"> • Increase the <i>Record Time</i>. • Delete messages (memory may be full).
Answering system problems	Possible solutions
The system keeps recording when I answer on an extension.	<ul style="list-style-type: none"> • You may have to change the line mode. Contact Customer Service for instructions.

Bluetooth problems	Possible solutions
<p>The XDECT 6135BTU won't pair with my phone.</p>	<ul style="list-style-type: none"> • Making sure your phone is in pairing mode. Check your phone's manual for instructions on Bluetooth device pairing. • Making sure your phone supports the Bluetooth hands-free profile. • Making sure your phone is in range of the base. • If XDECT 6135BTU appears in your mobile phone's paired device list, remove it and try pairing again. • Turn your phone off, then turn it on again. Repeat pairing steps. • Disconnecting the base AC adapter. Wait a few minutes, then reconnect it. Repeat pairing steps. • Checking the link order for that phone. In rare cases, some mobile phones may not be linked as the third or fourth mobile phone.
<p>The XDECT 6135BTU doesn't ring when my mobile phone does.</p>	<ul style="list-style-type: none"> • Making sure your phone has Bluetooth turned on. • Checking if the XDECT 6135BTU is on the paired device list on your mobile phone and is in connected status. If not, try pairing again. • Making sure your phone doesn't connect with other Bluetooth devices. • Making sure your phone is in range of the base. • Making sure the handset's ringer is not turned off. (The base doesn't ring on mobile phone calls.)
<p>The XDECT 6135BTU paired with my phone, but I can't hear anything through the handset.</p>	<ul style="list-style-type: none"> • Adjusting the handset volume. • Setting your mobile phone to transfer the audio to a Bluetooth device. Check your phone's manual for instructions on Bluetooth setup and options. • Erase the Bluetooth pairing and repair the mobile phone to the base again. To delete the Bluetooth pairing, see page 13.

Installing a Line Filter or DSL Filter

A telephone line filter or DSL filter prevents services that use the phone line from causing interference on your phone. To get a line filter, contact your service provider or look in an electronics store.

Plug the filter into the telephone wall jack and plug the base into the filter. Make a test call to make sure the noise is gone.

Liquid Damage

CAUTION: If the base is covered in liquid, disconnect the adapter and phone cord from the wall before touching it.

If the liquid is only on the exterior housing of the base or handset, wipe it off and use as normal. If you can hear liquid inside the housing:

1. Remove all compartment covers, and disconnect all cables and cords.
2. If liquid is leaking from any vent or hole, turn the phone so that vent faces down. If not, place the largest vent face down.
3. Let dry for at least 3 days. Check for liquid inside the phone before replacing compartment covers and reconnecting cords.

Resetting Handsets

The base can register up to 10 handsets. If you have trouble with a handset or if you want to replace one, clear the registration information from the base and the handset:

1. Press and hold **END** and **#** at the same time until you see the *System Reset* menu.
2. If you still have the base the handset is registered to, select *Deregister HS*, then select the handset you want to reset. If you don't have that base anymore, select *Base Unavailable*.
3. To confirm, select *Yes*. The handset displays *Handset not registered*.

Registering Handsets

If you see a “not registered” message on a handset, you must register it to a base before using it.

1. Place the handset in the base; the display should say *Handset Registering*.
 2. Wait until the display says *Registration Complete* (about 30 seconds), then pick up the handset; press **HOME/FLASH**.
- ⚠ **If you don't hear a dial tone or the display says *Registration Failed*, charge the battery completely, then try again.**

Adapter and Battery Information

AC adapter	Base	Charger
Part number	AAD-6135	AAD-600S(M)
Input voltage	240V AC, 50Hz	240V AC, 50Hz
Output voltage	6V DC @ 500mA 7V DC @800mA	9V DC @ 210mA

- ◆ Use only the supplied AC adapters.
- ◆ Use the proper adapter for the base and any chargers.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

Battery pack (with normal use)	
Part number	BT-694 or BT-694s
Capacity	650mAh (BT-694) or 500mAh (BT-694s)
Talk time	about 10 hours
Standby time	about 7 days
Battery life	about 1 year

- ◆ Replace the battery when the talk or standby time becomes noticeably reduced. For replacements, visit the online shop on our website (see the front cover).
- ◆ When the battery gets low, the handset beeps and shows a low battery alert; put the handset in the cradle for recharging.

Rechargeable Battery Warning

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride (Ni-MH) battery.
- ◆ Do not short-circuit the battery.
- ◆ The batteries in this equipment may explode if disposed of in a fire.
- ◆ Do not charge the batteries in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause it to explode.


Rechargeable batteries must be recycled or disposed of properly.

Uniden works to reduce lead content in our products and accessories.


Mounting the base unit on a wall

This phone can be mounted on any standard telephone wall plate.

- ① Route the AC adapter and the telephone cord through the hole of the wall mount bracket.

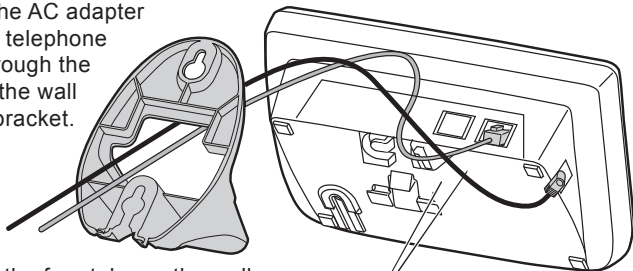


- ③ Line up the four tabs on the wall mount bracket (two at the top and two at the bottom) with the four notches on the bottom of the base. Slide the bracket into place.

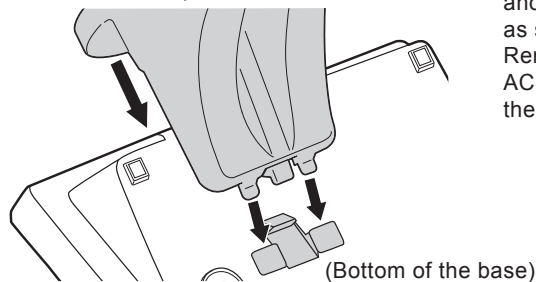

②

Connect the AC adapter and the telephone cords as shown below. Remember to route the AC adapter cord through the channel.


- ④ Hook the AC adapter cord into the smaller notch at the bottom of the bracket, and let the cord hang below the bracket.

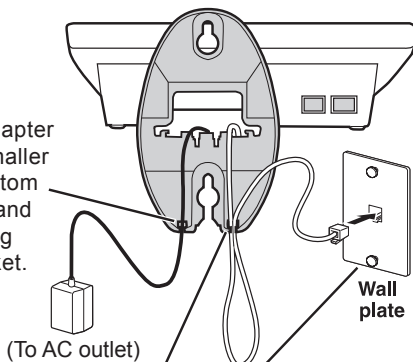

Wall plate


- ⑤ Plug the telephone cord into the wall jack. Hook both sides of the telephone cord into the larger notch OR tuck the excess cord into the open space in the bracket.

- ⑥ Place the mounting slots over the pins on the wall plate.

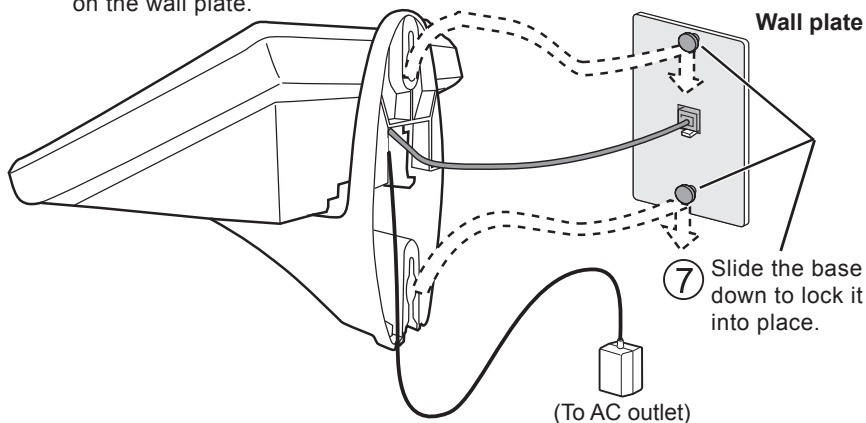

Removing the wall-mount bracket

At the bottom of the base, lift up on the release latch between the two bottom tabs and push the bracket up.

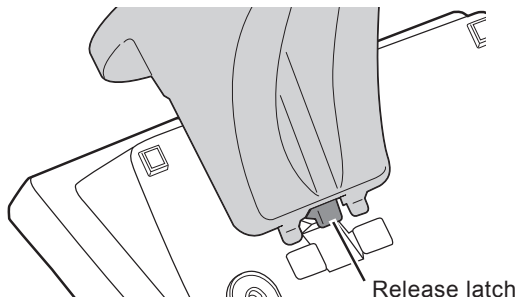

Note: Mounting the phone directly on the wall

- Be sure the wall is capable of supporting the weight of the phone, and use the proper type of anchoring device for the wall material.
- Insert two #10 screws (minimum length of 35mm, not supplied) into the wall, 100mm apart.
- Leave the screw heads 3mm away from the wall to allow room for mounting the phone.
- Align the mounting slots over the screws and slide the base down into place as shown above.

INDEX

- A**
- Answer Machine
 - Call Screen 25
 - Get Messages 23
 - Greeting (Outgoing Message) 23
 - Record / Change / Delete 23
 - On/Off 23
 - Ring time / Record Time 23
 - Record Time 23
 - Remote Operation
 - from Handset 25
 - away from Home 26
 - Security Code 26
 - Any Key Answer 10
 - AutoTalk 10
- B**
- Banner 10
 - Battery
 - Preparing and charging 4
 - Replacement and handling 31
 - Belt Clip 4
- C**
- Caller ID
 - Caller Announce 11
 - Caller ID service 14
 - Deleting 15
 - Storing 15
 - Using 15
 - Viewing 15
 - Call Block 19
 - Call Transfer 21
 - Call Waiting 15
 - Chain dialing 18
 - Clock (see Date & Time)
 - Conference Calling 20, 21
- D**
- Date & Time 11
 - De-register the handset 30
 - Distinctive ringer (see Personal Ring)
 - Do Not Disturb (DND) 19
- E, F, G**
- Earpiece volume 27
 - Find handset 7, 13
- H**
- Hands-free conversation 29
 - HD Audio 11
 - Headset 16
- I, J, K, L**
- Intercom 22
 - Key Touch Tone 10
 - Keypad Lock 9
 - LCD contrast 11
 - Line Conference (see Conference Calling)
 - Line Filter 29
 - Liquid Damage 30
- M, N, O**
- Multihandset Feature 20, 30
 - Mute 7, 8, 12, 16
 - Noise 27
- P, Q**
- Paging handsets (see Find handset)
 - Personal Ring 10
 - Phonebook 16
 - Download from mobile 16
 - Editing (Home only) 17
 - Erasing 17

Making calls	17
Storing.....	17
Viewing	17
Chain dialing.....	18
Privacy mode	21

R

Redialing a call	9, 14
Register the handset	30
Resetting the handset	30
Ringer	
Ringer melodies & tones	10
Ringer volume	13

S

Static (see Noise)

T, U, V

USB Charge.....	7
Voice Mail	22

W, X, Y, Z

Wall Mounting the Base	32
Warranty	36

ONE-YEAR LIMITED WARRANTY

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the XDECT 6135 BTU (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the

Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Phone number: 1300 366 895
Email address: custservice@uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki
Auckland 2013
Phone number: (09) 273 8377
Email address: service@uniden.co.nz

Uniden®

©2012 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in Vietnam U01UN456BZZ(0)